

IR Camera Version

1. 主題：IR カメラのバージョン情報を取得する

2. 製品：近赤外カメラ全般

2.1. 事前に準備する

事前に TransFlyer SDK、AcapLib2 をダウンロードし、インストールを完了してください。 [AVAL DATA download site.](#)


事前に関連するマニュアルをダウンロードしてください。 [AVAL DATA download site.](#)

ご注意 カメラ梱包箱には SDK のメディアは含まれません

3. GigE/CoaxPress インターフェイスカメラの場合(TransFlyerSDK 使用時)


3.1. TSight の起動

TSight を起動し、画面右上の『Help->Version』を選択します。

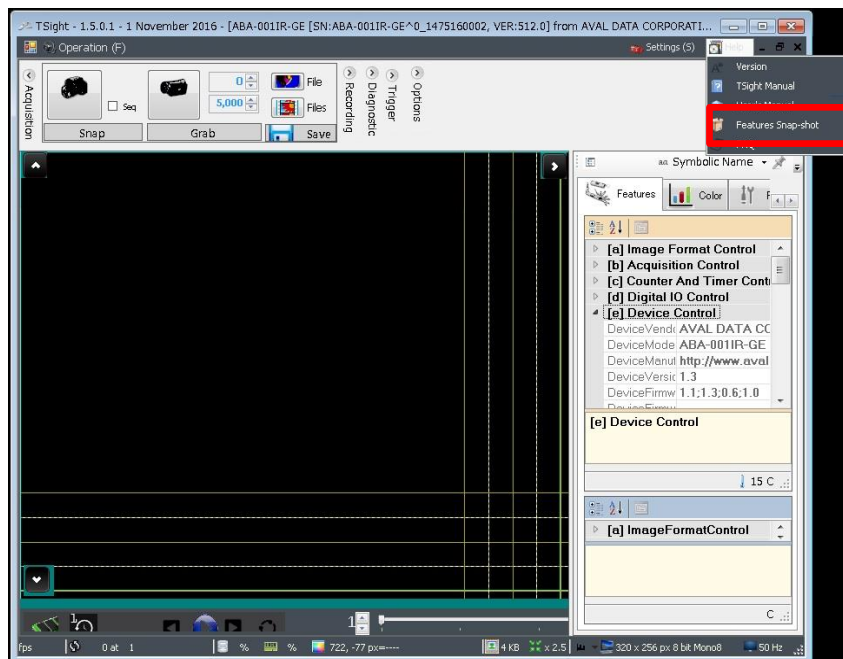


3.2. Features Snapshot 画面の表示

Features Snapshot 画面表示後、画面左上のボタンをクリックします。

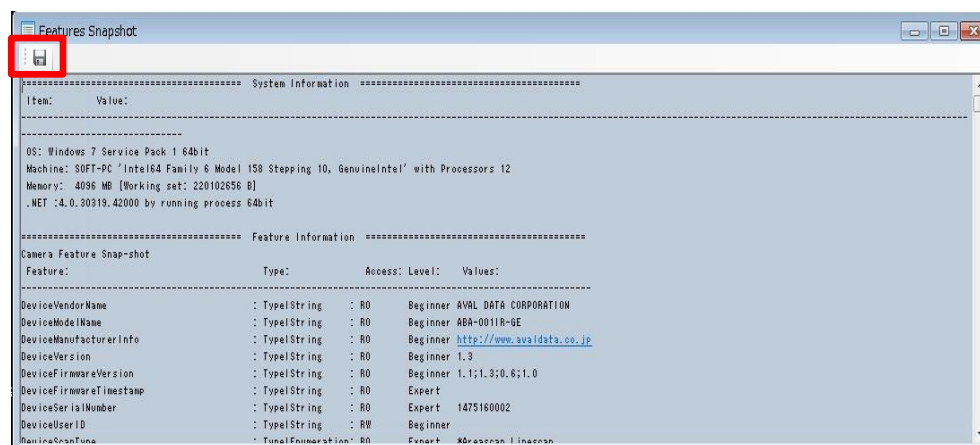

3.3. Save As ダイアログの表示

Save As ダイアログ表示後、任意のフォルダにファイルを保存します。

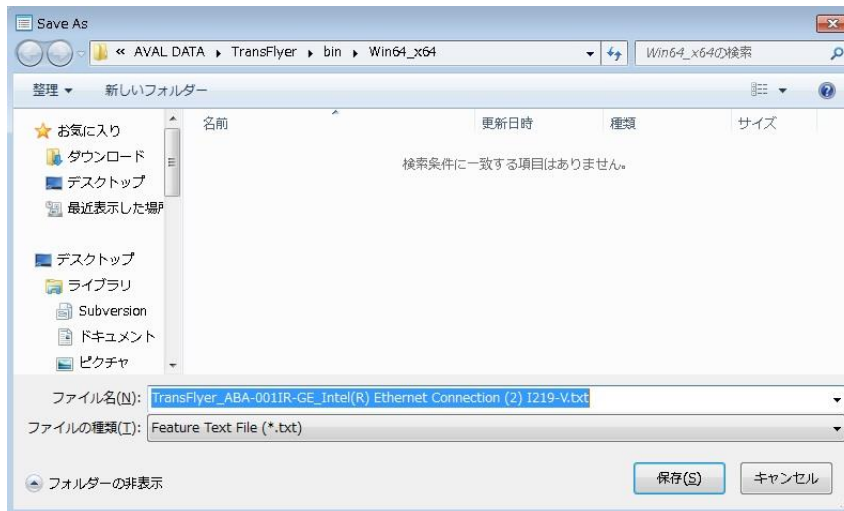


3.4. テキストファイルの保存

上記で保存したファイルにカメラの情報が記載されますので、このファイルを弊社にご送付ください。

4. GigE/CoaxPress インターフェイスカメラの場合(AcapLib2SDK 使用時)


4.1. AIPTool の起動

AIPTool を起動し、カメラをダブルクリックしてください。

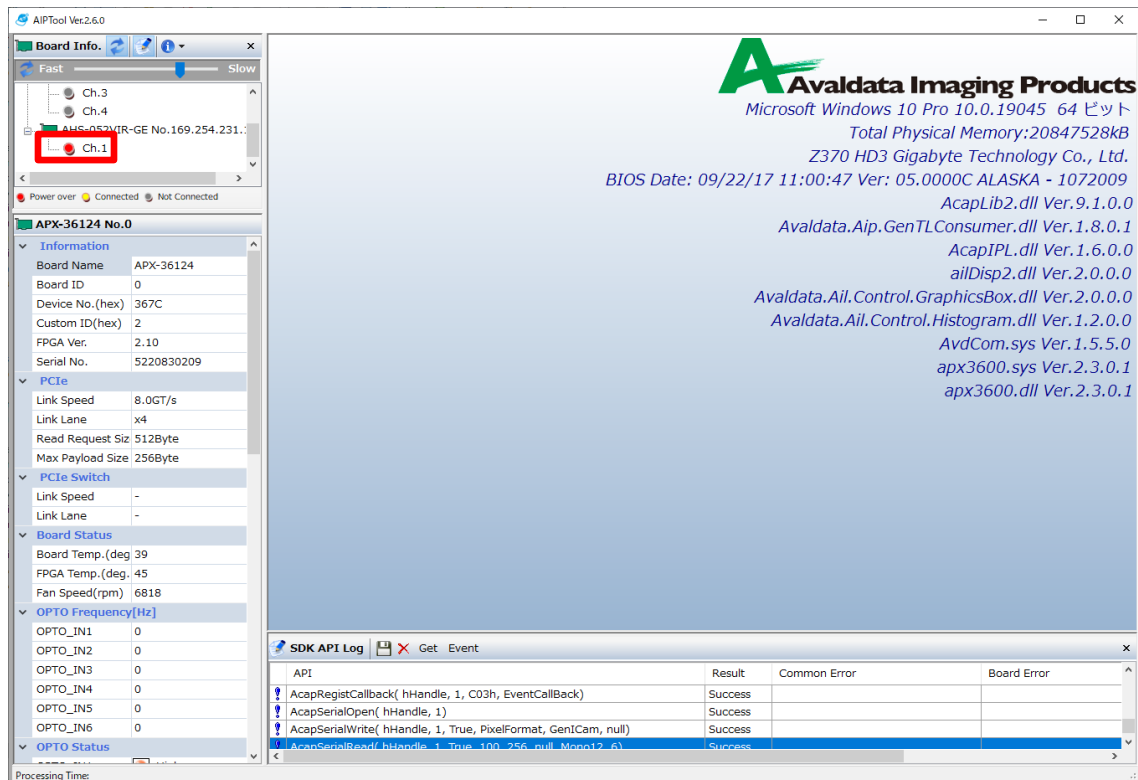


4.2. Xml の表示

以下ボタンをクリックして xml を表示してください。

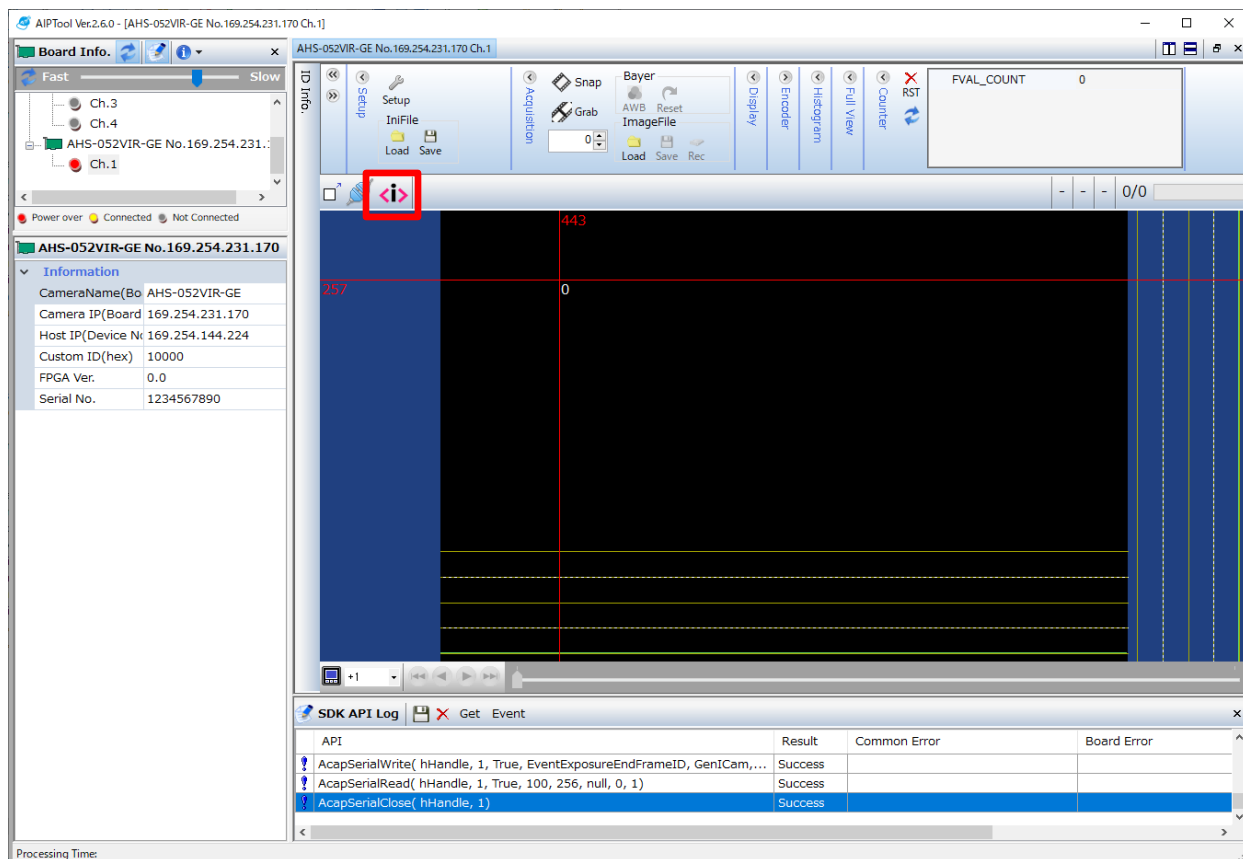

4.3. カメラパラメータの保存

以下ボタンをクリックして csv ファイルを保存し、弊社にご送付ください。

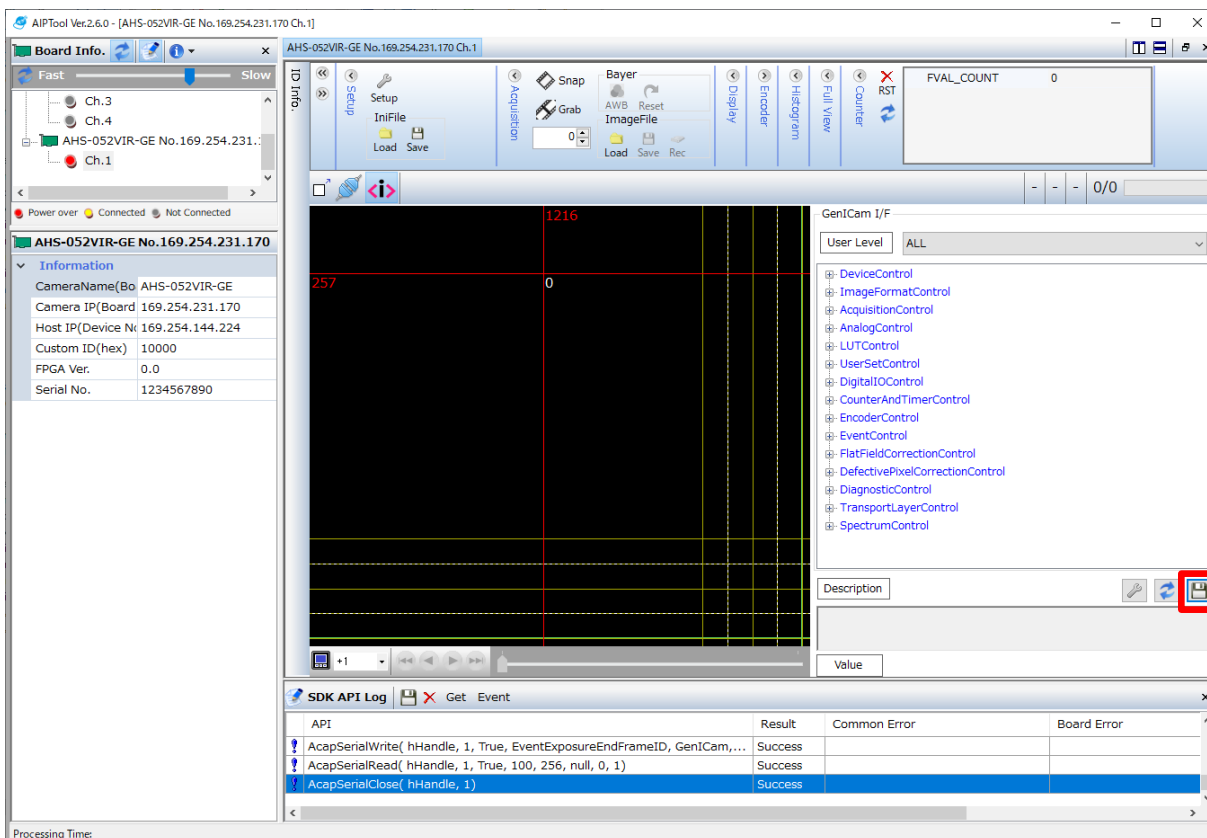

5. CameraLink インターフェイスカメラの場合


5.1. TeraTerm の起動

TeraTerm を起動し、カメラにコマンドが発行できる状態にします。



5.2. gcp コマンドの実行

『gcp』コマンドを実行します。

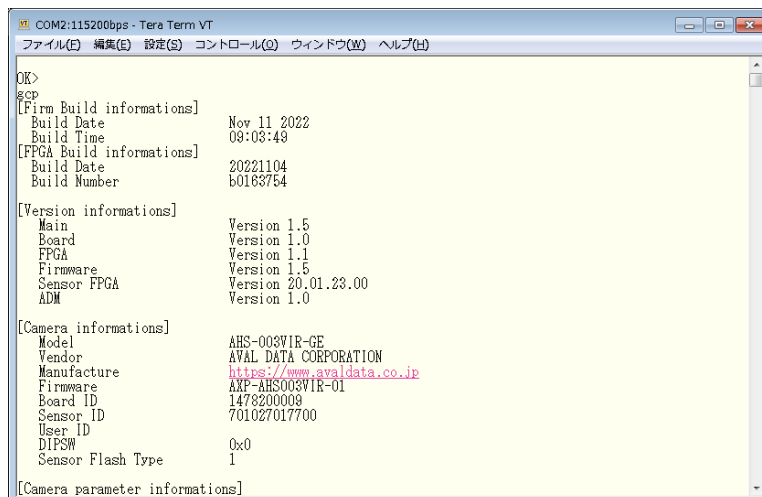

5.3. テキストファイルの保存

上記の TeraTeam で表示された情報をテキストファイルにコピーし、このファイルを弊社にご送付ください。

5.4. スクリーンショットの保存

上記でスクリーンショットした画像を保存し、弊社にご送付ください。

Additional Downloads and Support

Please access more Technical Application Notes on the web at https://www.avaldata.co.jp/support/support_index.html.

Manuals and FAQ:

Our on-line manuals at http://www.avaldata.co.jp/support/download_manual.html.

Our on-line FAQ site at http://www.avaldata.co.jp/support/support_qanda.html

You will get answers to some of the most common support questions. It is constantly updated, expanded, and refined to ensure that our customers have access to the latest information.

Product Downloads:

The customers can access the latest enhanced software and firmware can be downloaded from our download site at http://www.avaldata.co.jp/support/download_software.html. Regarding product information, please access the sales team at sales@avaldata.co.jp

We encourage our customers to keep their software and firmware up-to-date by downloading and installing the latest versions.

Contacting Technical Support

Before contacting Technical Support, have you:

1. Read the product documentation and user manual?
2. Check the FAQ Base or other technical application note?
3. Downloaded and installed the latest version of software and/or firmware?
4. Check your network/cables/power and a configuration of external equipment?

If you have done all the above and still cannot find adequate answer to your question or issue, please contact our Technical Support team at http://www.avaldata.co.jp/address/support_tech.html or support@avaldata.co.jp.

TECHNICAL SUPPORT TEAM		SUPPORT@AVALDATA.CO.JP
		www.avaldata.co.jp/support/support_qanda.html
Ebina Office Sales Department 14F VINA GARDENS OFFICE, 2-2 Megumi-cho, Ebina, Kanagawa 243-0438 Japan		sales@avaldata.co.jp
		+81-46-240-6944
		+81-46-240-6945